



Instructions for Using the AnchorLift

Anchor Retrieval System by Ironwood Pacific Outdoors

AnchorLift Disclaimer

- Always operate vessel in accordance with Coast Guard and other applicable regulations and guidelines.
- Use extreme caution when anchoring in moving water and when letting out and retrieving the anchor line.
- Always keep your anchor line free of tangles and away from the propeller.
- Do not use where loss of property or safety may be at risk.

Anchoring your boat with the AnchorLift system

1. Slide the AnchorLift over the end of the anchor line, threading the line *under* the bolt.
2. Knot the anchor line near its end and fasten the line to your boat.
3. Release the anchor by sliding the bolt to the up position, allowing the anchor line to slide through the AnchorLift. When the anchor and boat are in the desired position, toss the AnchorLift into the water.

To raise your anchor

1. With the AnchorLift on your anchor line, motor your boat forward around the anchor, taking care to keep the anchor line clear of the prop.
2. Proceed slowly – at roughly 5 knots – until the anchor has released from the bottom, then increase speed slightly – 6 to 8 knots. **Do not continue forward if the anchor does not break free.**
3. The Anchor line will slide through the AnchorLift and float the anchor to the surface.
4. When the anchor reaches the surface, shift into neutral and pull in the slack anchor line.