



How to use the Snap Setter Rev. 0715


Note: First remove any old snaps that need replacing.

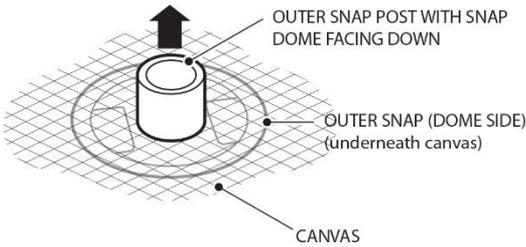


Mark place for new snap and cut a small hole in the canvas, just large enough for the outer snap post. Insert outer snap piece as shown.

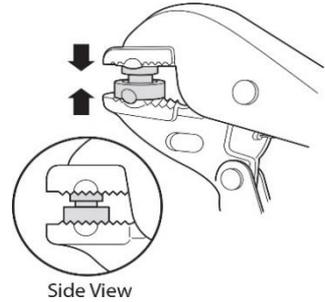

Adjust the Snap Setter so that die halves just touch. (Use adjuster on bottom of Snap Setter handle to lengthen or shorten gap as needed.)

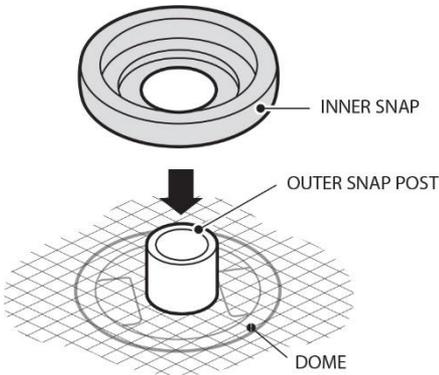

Push the inner snap over the snap post.

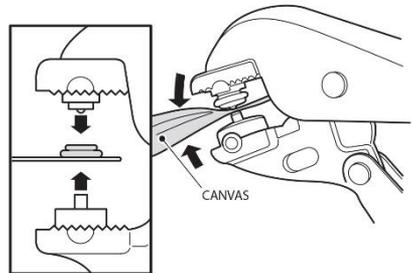

Position the Snap Setter so that the dome rests in the anvil and the male die touches the end of the post. Squeeze handles together to set the snap, until Snap Setter clamps.

Check snap to be sure that it is tight and that the post is rolled over. (Snap halves should snap together securely.)